

| PART NUMBER | DESCRIPTION | TYPE | QTY | CONDITION |
|-------------------|--|------|-----|-----------|
| 066-01160-2502 | System - Flight Management | R | 1 | SV |
| 066-01160-2502 | System - Flight Management | R | 1 | SV |
| 066-4013-02 | Controller - R/Nav (Kcu568) | R | 1 | RP |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 1065-11-010 | Datalink - Unilink - UI-600 | R | 1 | NE |
| 11200-3 | Rudder Actuator | R | 1 | RP |
| 1152230-3 | Box - Dc Contactor Apu Option | R | 1 | NE |
| 1190-02-1113 | Nucmptr | R | 1 | OH |
| 1500-1080-501 | Unit - Hgs Overhead | R | 1 | NE |
| 1500-1080-501 | Unit - Hgs Overhead | R | 1 | NE |
| 17002-113 | Landing Gear Assy | R | 1 | NE |
| 2125-1AA | Seat - Flt Attend Aft | R | 1 | NE |
| 2125-1AA | Seat - Flt Attend Aft | R | 1 | NE |
| 228-50080-138 | Cowl Assy - Nose - Upper Access Panel (Rh) | R | 1 | NE |
| 228-50080-138 | Cowl Assy - Nose - Upper Access Panel (Rh) | R | 1 | NE |
| 228-50080-138 | Cowl Assy - Nose - Upper Access Panel (Rh) | R | 1 | NE |
| 228-50121-213-500 | Cowl Assy - (Lh) | R | 1 | NE |
| 228-50121-214-500 | Cowl Assy - (Rh) | R | 1 | NE |
| 228-50300-112-500 | Bifurcator Instl - Fix Core Cowl (Rh) | C | 1 | NE |
| 228-50300-112-500 | Bifurcator Instl - Fix Core Cowl (Rh) | C | 1 | NE |
| 228-59245-801 | Nose Cowl | R | 1 | RP |
| 304543-4 | Unit - Apu Ignition | R | 1 | SV |
| 304543-4 | Unit - Apu Ignition | R | 1 | SV |
| 304543-4 | Unit - Apu Ignition | R | 1 | NE |
| 304543-4 | Unit - Apu Ignition | R | 1 | NE |
| 304543-4 | Unit - Apu Ignition | R | 1 | NE |
| 304543-4 | Unit - Apu Ignition | R | 1 | NE |
| 304543-4 | Unit - Apu Ignition | R | 1 | NE |
| 3053566-02 | Harness - Wiring | R | 1 | NE |
| 3053566-02 | Harness - Wiring | R | 1 | NE |
| 3053566-02 | Harness - Wiring | R | 1 | NE |
| 3862013-519 | Bin Assy - Overhead Stowage | R | 1 | NE |
| 4601001N127 | Galley Assembly | R | 1 | NE |
| 4601001N127 | Galley Assembly | R | 1 | NE |
| 4614001Z119 | Windscreen Assy - (Lh) | R | 7 | NE |
| 600-90100-1005 | Control Column Assy | R | 1 | RP |
| 601R14501-1 | Flap Assy - Outboard (Lh) | R | 1 | RP |
| 601R14501-1 | Flap Assy - Outboard (Lh) | R | 1 | RP |
| 601R31901-69 | Door Assy - Main Passenger | R | 1 | NE |
| 601R35232-1 | Fairing Assembly Wing | R | 1 | RP |
| 601R38302-91 | Door Assy - Service/Emergency Exit | R | 1 | NE |
| 601R38302-91 | Door Assy - Service/Emergency Exit | R | 1 | NE |
| 601R38302-91 | Door Assy - Service/Emergency Exit | R | 1 | NE |
| 601R38302-91 | Door Assy - Service/Emergency Exit | R | 1 | NE |
| 601R38346-83 | Door Assy - Avionics Bay | R | 1 | NE |
| 601R38346-83 | Door Assy - Avionics Bay | R | 1 | NE |
| 601R41073-23 | Seat Assy - Observer | R | 1 | NE |

| PART NUMBER | DESCRIPTION | TYPE | QTY | CONDITION |
|-----------------|--------------------------------|------|-----|-----------|
| 601R41073-23 | Seat Assy - Observer | R | 1 | NE |
| 601R41073-23 | Seat Assy - Observer | R | 1 | NE |
| 601R41073-23 | Seat Assy - Observer | R | 1 | NE |
| 601R41073-23 | Seat Assy - Observer | R | 1 | NE |
| 601R41073-23 | Seat Assy - Observer | R | 1 | NE |
| 601R51602-177 | Box Assy - Junction (Jb3) | R | 1 | NE |
| 601R51602-177 | Box Assy - Junction (Jb3) | R | 1 | RP |
| 601R75124-3 | Manifold Assy - Ground Spoiler | R | 1 | OH |
| 601R75124-3 | Manifold Assy - Ground Spoiler | R | 1 | OH |
| 601R75124-3 | Manifold Assy - Ground Spoiler | R | 1 | NE |
| 601R75124-3 | Manifold Assy - Ground Spoiler | R | 1 | NE |
| 601R75230-11-01 | Pump Assy | R | 1 | NE |
| 601R75230-11-01 | Pump Assy | R | 1 | NE |
| 601R75230-11-01 | Pump Assy | R | 1 | NE |
| 622-9728-121 | Vertical Speed Indicator | R | 1 | RP |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7-45416-19 | Control Assy - Adg Release | R | 1 | NE |
| 7000700-975 | Az-810 | R | 1 | RP |
| 7000700-975 | Az-810 | R | 1 | RP |
| 7000700-975 | Az-810 | R | 1 | RP |
| 7001182-909 | Ad-550A | R | 1 | RP |
| 7001182-909 | Ad-550A | R | 1 | RP |
| 7001182-909 | Ad-550A | R | 1 | RP |
| 7004544-312 | Symbol Generator | R | 1 | NE |
| 80-0535-29 | Panel Assy - Master Caution | R | 1 | NE |
| 80-0535-29 | Panel Assy - Master Caution | R | 1 | NE |
| 80-0535-29 | Panel Assy - Master Caution | R | 1 | NE |
| 80-0535-29 | Panel Assy - Master Caution | R | 1 | NE |
| 819300-2-005 | Unit-Engine Monitor | R | 1 | NE |
| 819300-2-005 | Unit-Engine Monitor | R | 1 | NE |
| 820029-1-005 | Unit - Engine Monitoring | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0022-006 | Fms Card 4100 | R | 1 | NE |
| 822-0393-001 | Vir-433 / Navigation Receiver | R | 1 | SV |
| 822-0393-001 | Vir-433 / Navigation Receiver | R | 1 | SV |
| 822-0393-001 | Vir-433 / Navigation Receiver | R | 1 | NE |
| 822-0393-001 | Vir-433 / Navigation Receiver | R | 1 | SV |
| 82540322-005 | Side Shroud - Fixed | R | 10 | NE |

| PART NUMBER | DESCRIPTION | TYPE | QTY | CONDITION |
|---------------|--|------|-----|-----------|
| CC670-51450-1 | Pedestal Assy - Center Console - Cockpit | C | 1 | NE |
| CC670-51723-1 | Tray - Mounting | C | 12 | NE |
| HP1333200-3 | Valve | R | 1 | RP |
| MI585350-5 | Receiver/Transmitter - (Wr-8--) | R | 1 | SV |
| MI585350-5 | Receiver/Transmitter - (Wr-8--) | R | 1 | NE |
| MI585350-5 | Receiver/Transmitter - (Wr-8--) | R | 1 | NE |
| PA4028AA01 | Amplifier - Passenger Address | R | 1 | SV |

